

**IMPORTANT:** Read through all instructions BEFORE beginning programming

# Programming Wall Mount Remotes

with mini receiver OR Silent Series Motor

Single Channel  
Wall Mount Remote EL03-10WM01

6 Channel  
Wall Mount Remote EL03-10WM06

16 Channel  
Wall Mount Remote EL03-10WM16

**IMPORTANT: DO NOT connect receiver to power source prior to programming instruction #1**

## 1. Programming Wall Mount remote to operate with mini receiver or Silent Series motor built-in receiver.

For single channel remote, skip step A and proceed to step B.


A. For multi channel remote, select channel on remote to be programmed by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b)



B. To Place Receiver in Programming Mode: Press and hold Open button (a).



Continuing to hold Open button (a), connect receiver to power supply.

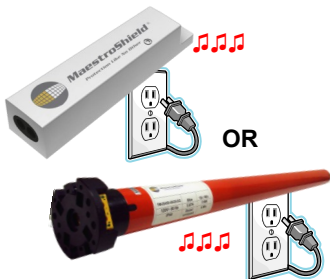

C. Within 3-5 seconds, motor will start beeping.

When beeping begins, release Open button (a).

## 1. Programming Wall Mount remote (cont.)

D. While receiver is still beeping, press Open Button (a) again; you will hear 3 consecutive beeps confirming programming.



Single channel remote or selected channel is now programmed

Check if motor direction is operating correctly. If not, proceed to step 2

## 2. Change Motor Direction (open and close function in reverse)

A. While receiver power is connected, press and hold Stop button (d) until beeping sounds;



B. While receiver is beeping (approx. 5 seconds), press Close button (c).



Operating direction is now changed

B. To change motor direction back, repeat steps 2A and 2B

Proceed to step 3, 4, and 5 as needed


## 3. Delete Wall Mount Remote from operating with mini receiver or Silent Series Motor

For single channel remote, skip step A.


A. For multi channel remote, select channel on remote to be deleted by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b);



B. With receiver power connected, press and hold Stop button (d) until beeping sounds;

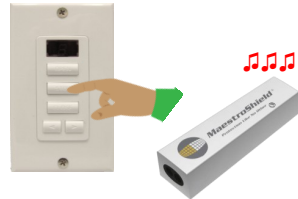

C. While receiver is beeping (approx. 5 seconds), using a small screwdriver, press Reset button (f) on remote; hold until you hear 3 beeps

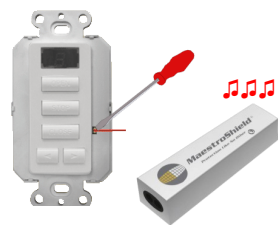

Single channel remote or selected channel is now deleted

## 4. Change between Continuous Mode & Step Mode

A. With receiver power connected, press and hold Stop button (d) until beeping begins



B. While receiver is beeping, release Stop button (d) and Re-Press stop button



Operation Mode is now changed

C. To change back to original mode, repeat steps 4A and 4B

## 5. Lock out unused channels on 16-channel remote ONLY

A. Select last channel on remote to be utilized by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b);



B. Hold Left Channel button (e) and Stop button (d) at same time until last channel number flashes on LED screen.



Remaining channels are now locked out and won't display on remote. Repeat Steps 5A and 5B to unlock unused channels

See reverse side for instructions on Operating Hand Held Remotes

## ADDING ADDITIONAL REMOTE CONTROL INSTRUCTION

1. Push & hold the stop button on the remote that is programmed to mini receiver. Within 3-5 second the mini receiver will start beeping. At that time release the stop button.



2. Using remote control to be added, select channel to be programmed.





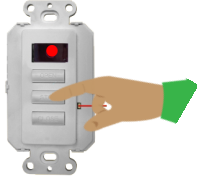











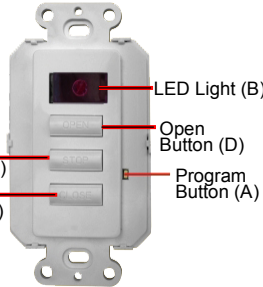



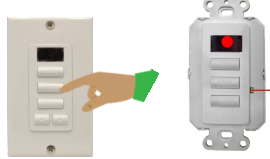


3. On new remote push the up button until the mini receiver beeps, confirming successful programming



**IMPORTANT:** Read through all instructions BEFORE beginning programming

# Programming Wall Mount Remotes

with Wall Mount Receiver

<h3>1. Programming Wall Mount remote to operate with wall mount receiver</h3>	<h3>2. Change Motor Direction (open and close function in reverse)</h3>	<h3>4. Change between Continuous Mode &amp; Step Mode</h3>	<h3>5. Operating Wall Mount Remote (cont.)</h3>
 <p>A. Using a small screwdriver, push program button (A) on receiver. LED light (B) will blink;</p>  <p>B. Push Stop button (C) on receiver;</p>  <p>Receiver is now in <b>Programming Mode</b>. LED light will remain lit while in programming mode (approx. 5 seconds)</p> <p>C. For single channel remote, skip this step. For multi channel remote, select channel on remote to be programmed by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b)</p>  <p>D. While receiver is in programming mode, press Open button (a) on remote.</p>  <p>Single channel remote or selected channel is now programmed</p>	<p><b>Check if motor direction is operating correctly. If not, continue with step 2</b></p> <p>A. While receiver power is connected, press and hold Stop button (d) until LED light on receiver stays on.</p>  <p>B. While receiver light is lit (approx. 5 seconds), press Close button (c) on remote.</p>  <p>Operating direction is now changed</p> <p>B. To change motor direction back, repeat steps 2A and 2B</p> <p><b>Proceed to step 3 and 4 as needed</b></p>	<p>A. With receiver power connected, press and hold Stop button (d) until receiver LED light is lit</p>  <p>B. While receiver light is on, release Stop button (d) and <b>Re-Press</b> stop button</p>  <p>Operation Mode is now changed</p> <p>C. To change back to original mode, repeat steps 4A and 4B</p>	<p>E. Press stop button (d) any time while curtain is closing to stop curtain from closing further</p>  <p><b>When in Step Mode</b></p> <p>A. If using a multi-channel remote, first select channel on remote by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b);</p>  <p>B. Press and release Open button (a) to open curtain to next preset step</p>  <p>C. Press and release Close button (c) to close curtain to next preset step</p>  <p>D. Press and hold Open button (a) or Close button (c) to override step mode</p>  <p>OR Hold "CLOSE" Hold "OPEN"</p>
<h3>3. Delete Programming of Wall Mount remote that operates with Wall Mount receiver</h3> <p>A. Place receiver in <b>Programming Mode</b>, see steps 1A and 1B</p> <p>B. For single channel remote, skip this step. For multi channel remote, select channel on remote to be deleted by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b)</p>  <p>C. While receiver is in programming mode, press Close button (c) on remote.</p>  <p>Single channel remote or selected channel is now deleted</p>	<h3>5. Operating Hand Held Remote</h3> <p><b>When in Continuous Run Mode</b></p> <p>A. If using a multi-channel remote, first select channel on remote by pressing channel buttons (e) right or left until desired channel is displayed in LED window (b);</p>  <p>B. Press and release Open button (a) to fully open curtain</p>  <p>C. Press Stop button (d) any time while curtain is opening to stop curtain from opening further</p>  <p>D. Press and release Close button (c) to fully close curtain</p> 	<h3>5. Changing Batteries</h3> <p>Operates on 2 AAA Batteries (included and pre-installed)</p> <p>A. Unscrew faceplate, unsnap control plate from battery compartment by prying loose 6 retention tabs (f);</p>  <p>B. Install new batteries as indicated;</p> <p>C. Discard old batteries in appropriate manner</p> <p>Retention tabs (f)</p>	

**\*IMPORTANT:** Warranties do not cover any damage to MaestroShield® products that result from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, lightning or any unauthorized disassembly, repair or modification. Warranties do not apply to any product on which the original identification information has been altered, obliterated or removed, has not been handled or packaged correctly, has been sold second hand or has been sold contrary to the United States export regulations without consent from MaestroShield®. 03/30/2012